


# R3000 Lite

## Hardware Manual

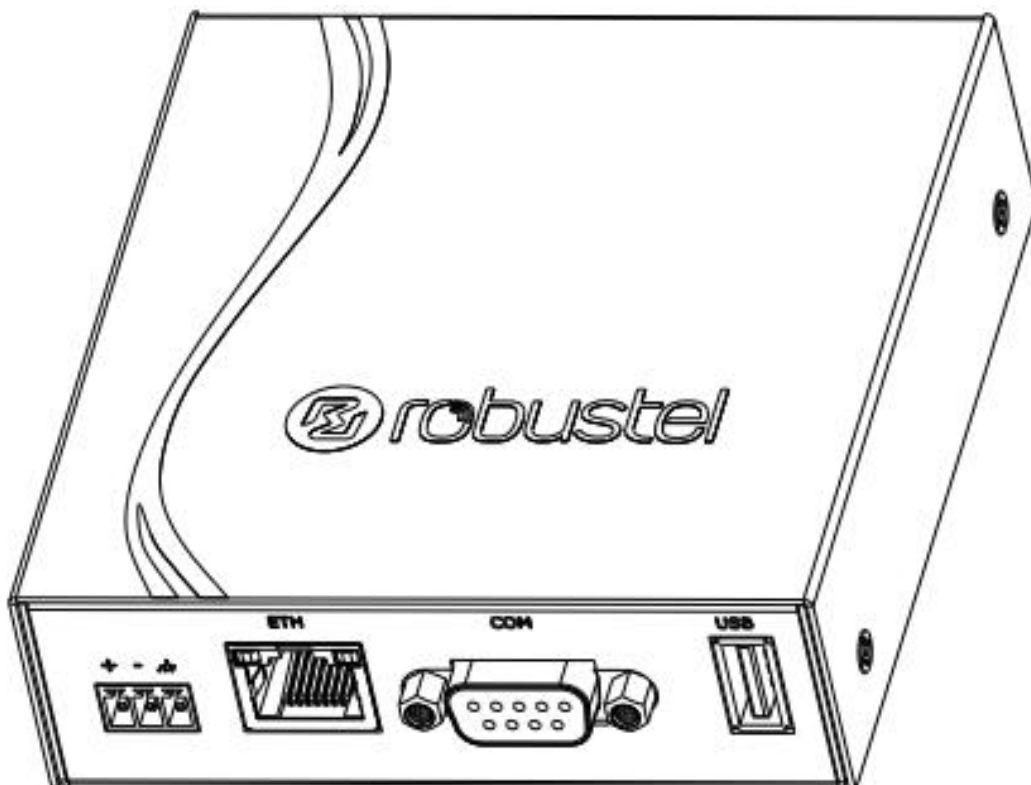

Version: 1.0.3

Date: February 10, 2025

## Regulatory and Type Approval Information

**Table 1:** Toxic or Hazardous Substances or Elements with Defined Concentration Limits

Name of the Part	Hazardous Substances					
	(Pb)	(Hg)	(Cd)	(Cr (VI) )	(PBB)	(PBDE)
Metal parts	X	o	o	o	o	o
Circuit modules	o	o	o	o	o	o
Cables and cable assemblies	o	o	o	o	o	o
Plastic and polymeric parts	o	o	o	o	o	o

o:  
Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in RoHS2.0.

X:  
Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials for this part *might exceed* the limit requirement in RoHS2.0.

-:  
Indicates that it does not contain the toxic or hazardous substance.

Note: Excessive lead can be exempted.

- Copper alloy containing up to 4 % lead by weight (RoHS Exemption 6(c)).
- Electrical and electronic components containing lead in a glass or ceramic other than dielectric ceramic in capacitors, e.g. piezoelectronic devices, or in a glass or ceramic matrix compound (ROHS Exemption7(c)- I ).

## Radio Specifications for Europe

RF technologies	2G, 3G, 4G
Cellular Frequency*	<p><b>Configuration 1</b></p> <p><b>4G:</b> LTE FDD: B1/B2/B3/B4/B5/B7/B8/B12/B13/B18/B19/B20/B25/B26/B28 LTE TDD: B38/B39/B40/B41</p> <p><b>3G:</b> WCDMA: B1/B2/B4/B5/B6/B8/B19</p> <p><b>2G:</b> GSM: B2/B3/B5/B8</p> <p><b>Configuration 2</b></p> <p><b>4G:</b> LTE FDD: B1/B3/B5/B7/B8/B20 LTE TDD: B38/B40/B41</p> <p><b>3G:</b> WCDMA: B1/B5/B8</p> <p><b>2G:</b> GSM: B3/B8</p> <p><b>Configuration 3</b></p> <p><b>4G:</b> LTE FDD: B1/B3/B7/B8/B20/B28A</p> <p><b>3G:</b> WCDMA: B1/B8</p> <p><b>2G:</b> GSM: B3/B8</p>
Max RF power	33 dBm±2dB@GSM, 24 dBm+1/-3dB@WCDMA, 23 dBm±2dB@LTE

\* *May vary on difference models.*

**Caution:** The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s) and Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC& IC Radiation Exposure Statement**

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### **Déclaration d'IC sur l'exposition aux radiations**

Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimum de 20 cm entre l'antenne et votre corps.

Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

### **Simplified EU & UK Declaration of Conformity**

We, Guangzhou Robustel Co., Ltd. are located at 501, Building #2, 63 Yongan Road, Huangpu District, Guangzhou, China, declare that this radio equipment complies with EU Radio Equipment Directive (RED) 2014/53/EU, Low Voltage Directive (LVD) 2014/35/EU, EMC Directive 2014/30/EU, UK Radio Equipment Regulations 2017, EMC Regulations 2016, Electrical Equipment (Safety) Regulations 2016. The full text of the EU& UK DoC is available at the following internet address:

[www.robustel.com/certifications/](http://www.robustel.com/certifications/)

## Safety Information

### General

- The router generates radio frequency (RF) power. When using the router, care must be taken on safety issues related to RF interference as well as regulations of RF equipment.
- Do not use your router in aircraft, hospitals, petrol stations or in places where using cellular products is prohibited.
- Be sure that the router will not be interfering with nearby equipment. For example: pacemakers or medical equipment. The antenna of the router should be away from computers, office equipment, home appliance, etc.
- An external antenna must be connected to the router for proper operation. Only uses approved antenna with the router. Please contact authorized distributor on finding an approved antenna.

### RF Exposure

- This device meets the official requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by authorized agencies.
- The device must be used with a minimum separation of 20 cm from a person's body to ensure compliance with RF exposure guidelines. Failure to observe these instructions could result in your RF exposure exceeding the applicable limits.

**Note:** Some airlines may permit the use of cellular phones while the aircraft is on the ground and the door is open. Router may be used at this time.



The symbol indicates that the product should not be mixed with general household waste but must be sent to separate collection facilities for recovery and recycling.



The symbol indicates that the product meets the requirements of the applicable EU directives.



The symbol indicates that the product meets the requirements of the relevant UK legislation.

### Related download link

Find more product documents or tools at:

[www.robustel.com/en/documentations/](http://www.robustel.com/en/documentations/)

### Technical Support

Tel: +86-20-82321505

Email: [support@robustel.com](mailto:support@robustel.com)

Web: [www.robustel.com](http://www.robustel.com)

### Document History

Updates between document versions are cumulative. Therefore, the latest document version contains all updates made to previous versions.








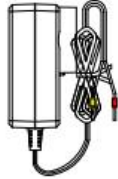
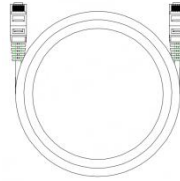
Date	Firmware Version	Document Version	Change Description
July 28, 2022	5.0.0	1.0.0	Initial release.
Nov. 22, 2022	5.0.0	1.0.1	Added declaration for product.
July 14, 2023	5.0.0	1.0.2	Modified declaration for product.
Feb. 10, 2025	5.0.0	1.0.3	<ol style="list-style-type: none"><li>Updated Regulatory and Type Approval Information and Cellular Frequency.</li><li>Added Nano SIM adapter to the package checklist.</li></ol>

**Overview**

The Robustel Industrial Dual SIM Cellular VPN Router (R3000 Lite) is a rugged cellular router offering state-of-the-art mobile connectivity for machine to machine (M2M) applications. R3000 Lite is a powerful router developed from RobustOS, a Robustel self-developed and Linux-based operating system which is designed to be used in Robustel hardware routers.


**Package Checklist**

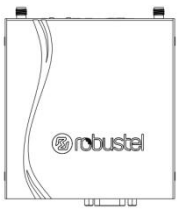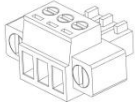Before commencing installation ensure your package has the following components:
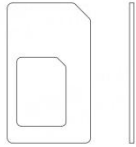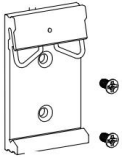
<p><b>Device</b></p> 	<p><b>3-PIN Terminal Block</b></p> 	<p><b>RCMS Card</b></p> 	<p><b>Quick Start Guide Card</b></p> 	<p><b>Nano SIM Adapter</b></p> 
<p><b>Mounting Kit (Optional)</b></p> 	<p><b>Cellular Antenna (Optional)</b></p> 	<p><b>Power Supply (Optional)</b></p> 	<p><b>Ethernet Cable (Optional)</b></p> 	

**Note:** The accessories could be different on specific order.


**Panel Layout (May Vary on Different Models)**

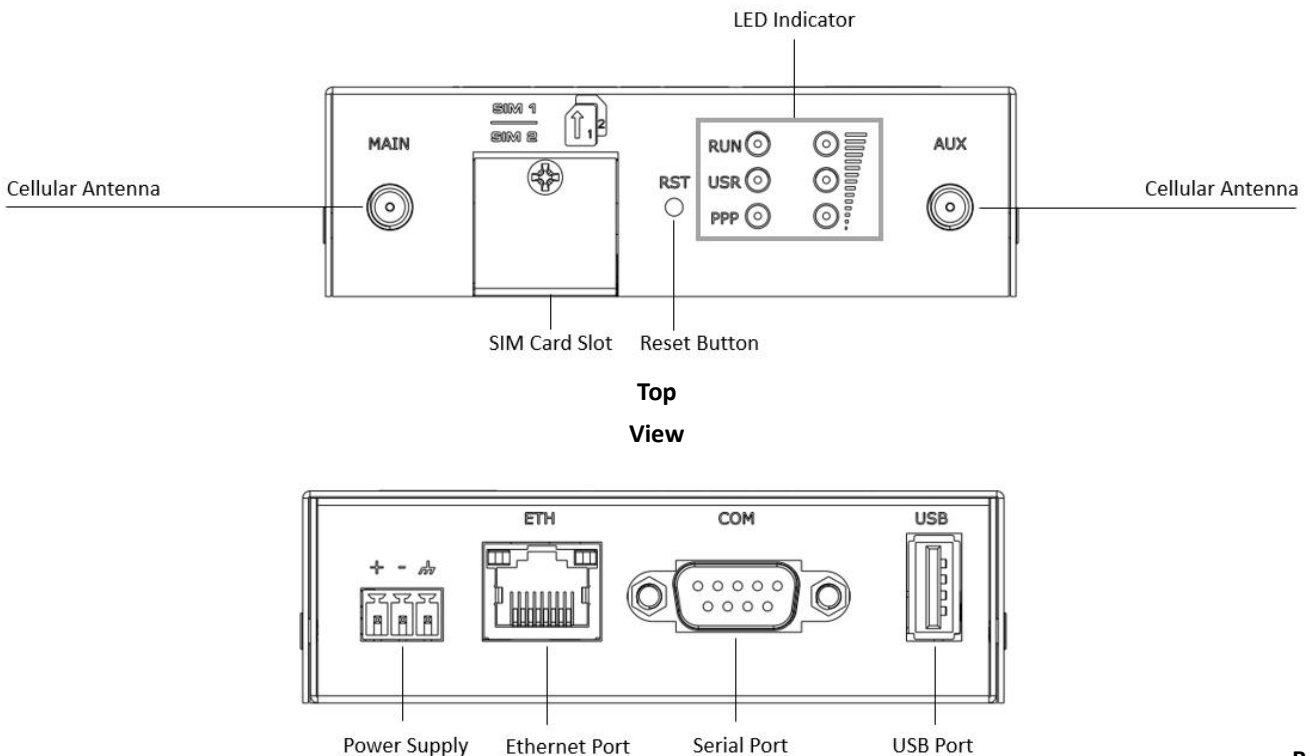

**Bot**

## Interface Descriptions

### 1. LED Indicator

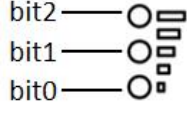
Name	Color	Status	Description
RUN	Green	On, fast blinking (250ms blink time)	Router is powered on (System is initializing)
		On, blinking (500ms blink time)	Router starts operating
		Off	Router is powered off
USR-SIM	Green	On, solid	Main Card is being used
		On, blinking	Backup card is being used
		Off	NO SIM card
USR-NET	Green	On, solid	Network is joined successfully and worked in an optimum one
		On, blinking	Network is joined successfully but worked in a lower-level than standard
		Off	Network is not joined or joining
USR-OpenVPN	Green	On, solid	OpenVPN connection is established
		Off	OpenVPN connection is not established
USR-IPsec	Green	On, solid	IPsec connection is established
		Off	IPsec connection is not established
PPP	Green	On, solid	Link connection is established
		Off	Link connection is not established
	Green	Three lights are solid green	High signal strength (21-31) is available
		Two lights are solid green	Medium signal strength (11-20) is available
		One light is solid green	Low signal strength (1-10) is available
		Off	No signal
<p>When the network is disconnected, those three signal LEDs are designed as a binary combination code to indicate a series of error report.</p> <p>Blinking: 1    Off: 0</p> <p>bit2 bit1 bit0</p> <p>0 0 1    AT command failed</p> <p>0 1 0    no SIM card detected</p> <p>0 1 1    need to enter the PIN code</p> <p>1 0 0    need to enter the PUK code</p> <p>1 0 1    registration failed</p> <p>1 1 0    module error</p> <p>1 1 1    not support the module</p>			

**Note:** You can choose the display type of USR LED. For more details, please refer to **RT123\_SM\_RobustOS Software Manual Service > Advanced > System > System Settings > User LED Type.**

### 2. USB Interface

Feature	Operation
Firmware upgrade	USB interface is used for batch firmware upgrading, but cannot be used for sending or receiving data from slave devices which connected to it. You can insert a USB storage device into the router's USB interface, such as a U disk or a hard disk. If there have a supported configuration file or a router firmware in this USB storage device, the router will automatically update the configuration file or the firmware. For more details, see <b>RT123_SM_RobustOS Software Manual.</b>

### 3. PIN Assignment

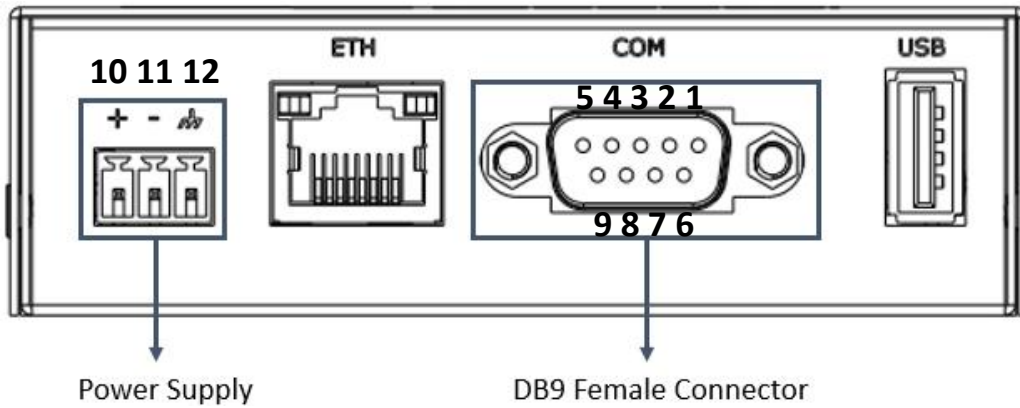

PIN	Polarity
10	Positive
11	Negative
12	GND

PIN	Debug (232)	RS-232	RS485 (2-Line)	Direction
1			Data+(A)	--
2		RXD		Router → Device
3		TXD		Router ← Device
4	DRXD			Router ← Device
5	GND	GND	GND	
6			Data-(B)	--
7		RTS		Router ← Device
8		CTS		Router → Device
9	DTXD			Router → Device

### 4. Reset Button

Feature	Operation
Reboot	Press and hold the RST button for 2~ 5 seconds under the operating status.
Restore to default configuration	Press and hold the RST button for 5~10 seconds, the RUN LED starts blinking quickly, the router will restore to default configuration.
Restore to factory default settings	Once the operation of restoring default configuration is performed twice within one minute, the router will restore to factory default settings.


Note: The more details please refer to *RT123\_SM\_RobustOS Software Manual, 2.3 Factory Reset*.

**5. Ethernet Ports.** R3000 Lite Router has one Ethernet port with two LED indicators. The yellow one is link indicator and the green one is speed indicator. For details about status, see the table below.


Indicator	Status	Description
Link indicator	On, solid	Connection is established
	On, blinking	Data is being transferred
	Off	Connection is not established
Speed indicator	On, solid	100 Mbps mode
	Off	10 Mbps mode

**Hardware Installation**

1. **SIM Card Installation.** Loosen the screws associated with the cover by using a screwdriver and then find the SIM card slot. Press the card with finger until you hear a click and then tighten the screws associated with the cover by using a screwdriver. Put back the cover and tighten the screws associated with the cover by using a screwdriver.

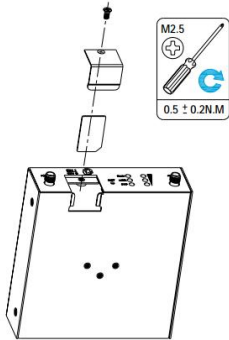


2. **Antenna Installation.** Rotate the antenna into the antenna connector accordingly.

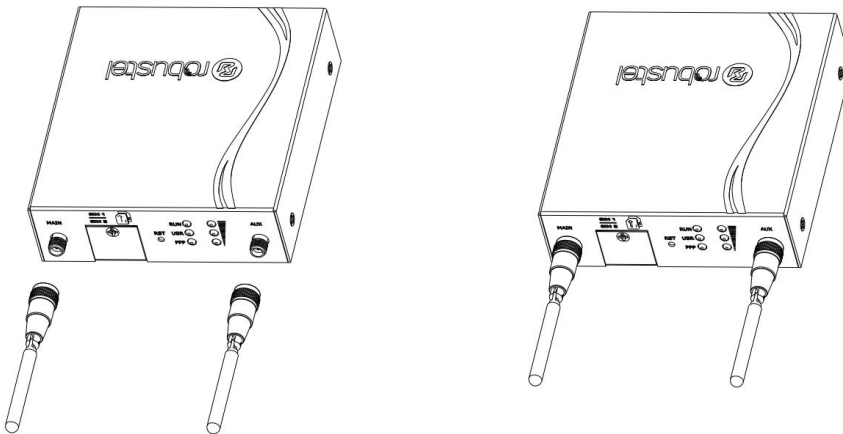


3. **Mounting Kit installation. (Optional)**

- Wall mounting

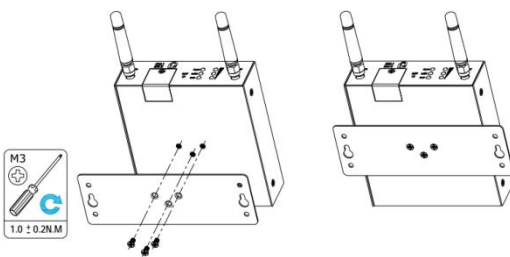

- DIN rail mounting

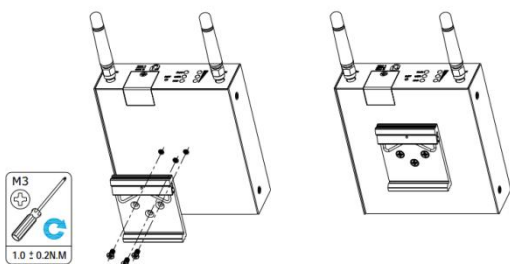


4. **Power Supply installation.** Following to the color of the head, connect the cable marked red to the positive pole through a terminal block, and connect the yellow one to the negative in the same way.


**Note:** The range of power voltage is 9 to 36V DC.

### CONNECTING THE POWER CABLE

COLOR	POLARITY
RED	+
YELLOW	-

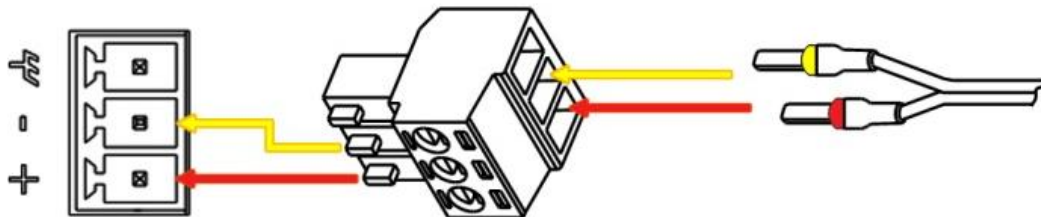


5. **Connect the Router to a Computer.** Connect an Ethernet cable to the port marked ETH at the bottom of the R3000 Lite, and connect the other end of the cable to your computer.

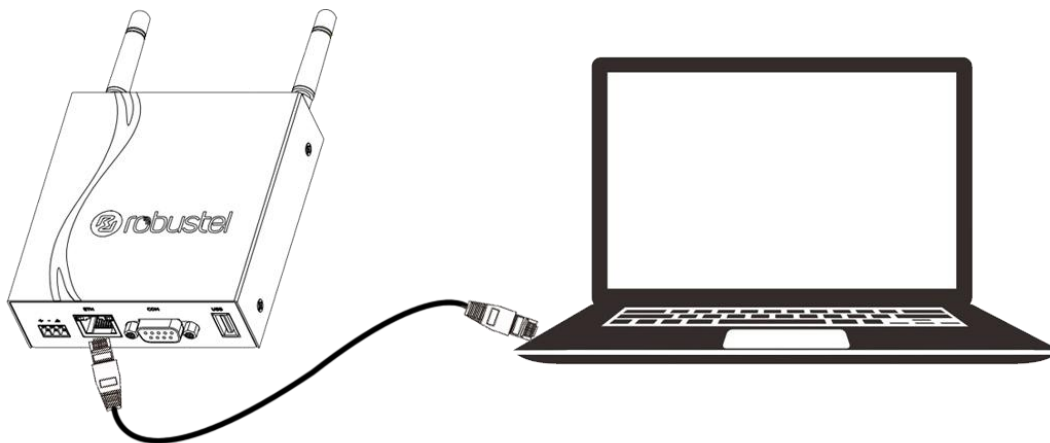

**Login to the Device**


1. Connect the router’s Ethernet port to a PC with a standard Ethernet cable.
2. Before logging in, manually configure the PC with a static IP address on the same subnet as the gateway address, click and configure "Use the following IP address".

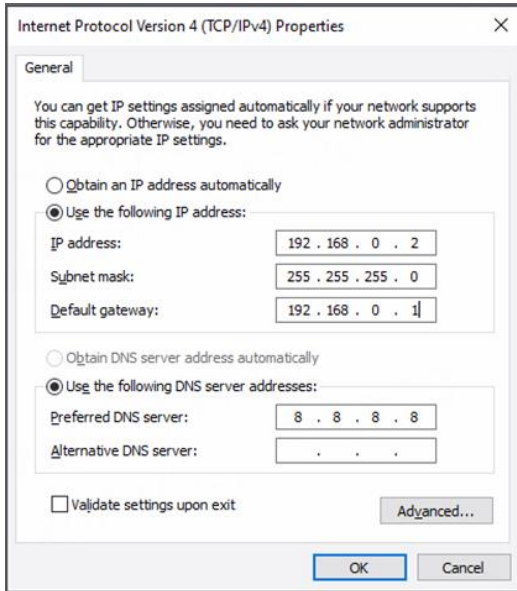


3. To enter the gateway's web interface, type <http://192.168.0.1> into the URL field of your Internet browser.
4. Use login information shown in the product label when prompted for authentication.



5. After logging in, the home page of the web interface is displayed, then you can view system information and perform configuration on the device.

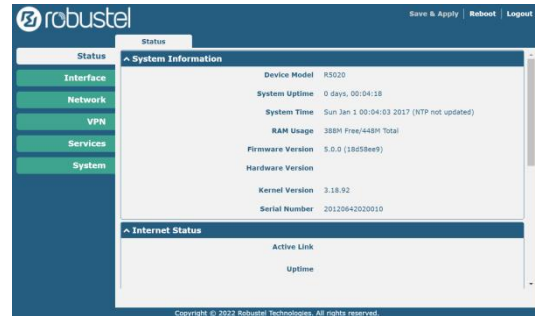

6. The automatic APN selection is ON by default, if need to specify your own APN, please go to the menu **Interface->Link Manager->Link Setting->WWAN Settings** to finish the specific setting.

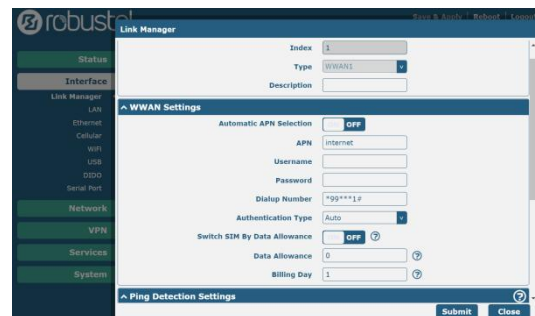

7. The more configuration details please refer to **RT123\_SM\_RobustOS Software Manual**.  
(END)